
Setup instructions:

- 1. Plug in power. Power indicator light will be illuminated.
- 2. Plug the ventilator to the RCM via the USB cable provided. The signal light will illuminate when communication is achieved. If the error light is illuminated, contact your Home Care Provider.
- 3. Unplug the USB cable from ventilator.
- 4. Once you are unplugged, your ventilator is mobile.

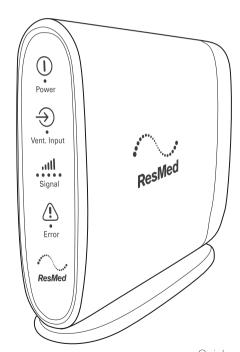

ResMedConnectivityModule

For Astral and Stellar devices




Bella Vista NSW 2153 Australia

Distributed by

Elizabeth Macarthur Drive ResMed Corp 9001 Spectrum Center Boulevard San Diego CA 2123 USA Bella Vista NSW 2153 [EC | REP | ResMed (UK) Ltd 96 Jubilee Ave Milton Park Abingdon Oxfordshire OX14 4RW UK

See ResMed.com for other ResMed locations worldwide. AirView, Astral and Stellar are trademarks and/ or registered trademarks of the ResMed family of companies. For patent and other intellectual property information, see ResMed.com/ip. © 2016 ResMed Ltd. 278185/2 2016-05



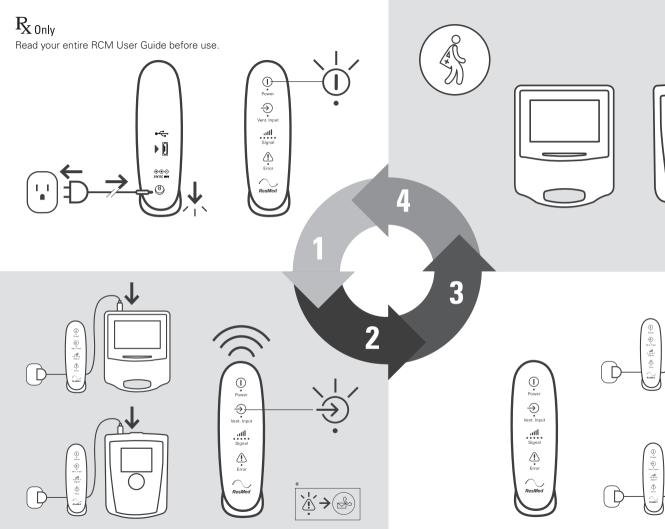

For Setup instructions refer to the next page