









Description:

If required, you can manually change a user's password.

To change password manually:

- 1. From the user's **Basic details** screen, click **Change password**.
- 2. Enter a new password.

Note: The new password must meet the acceptance criteria. Inform the user of their new password.

3. Click **Save**.